


GATWICK AIRSIDE ROADS MAP

Check AIRDAT for latest version

CHARLIE

Smoking permitted only in designated areas

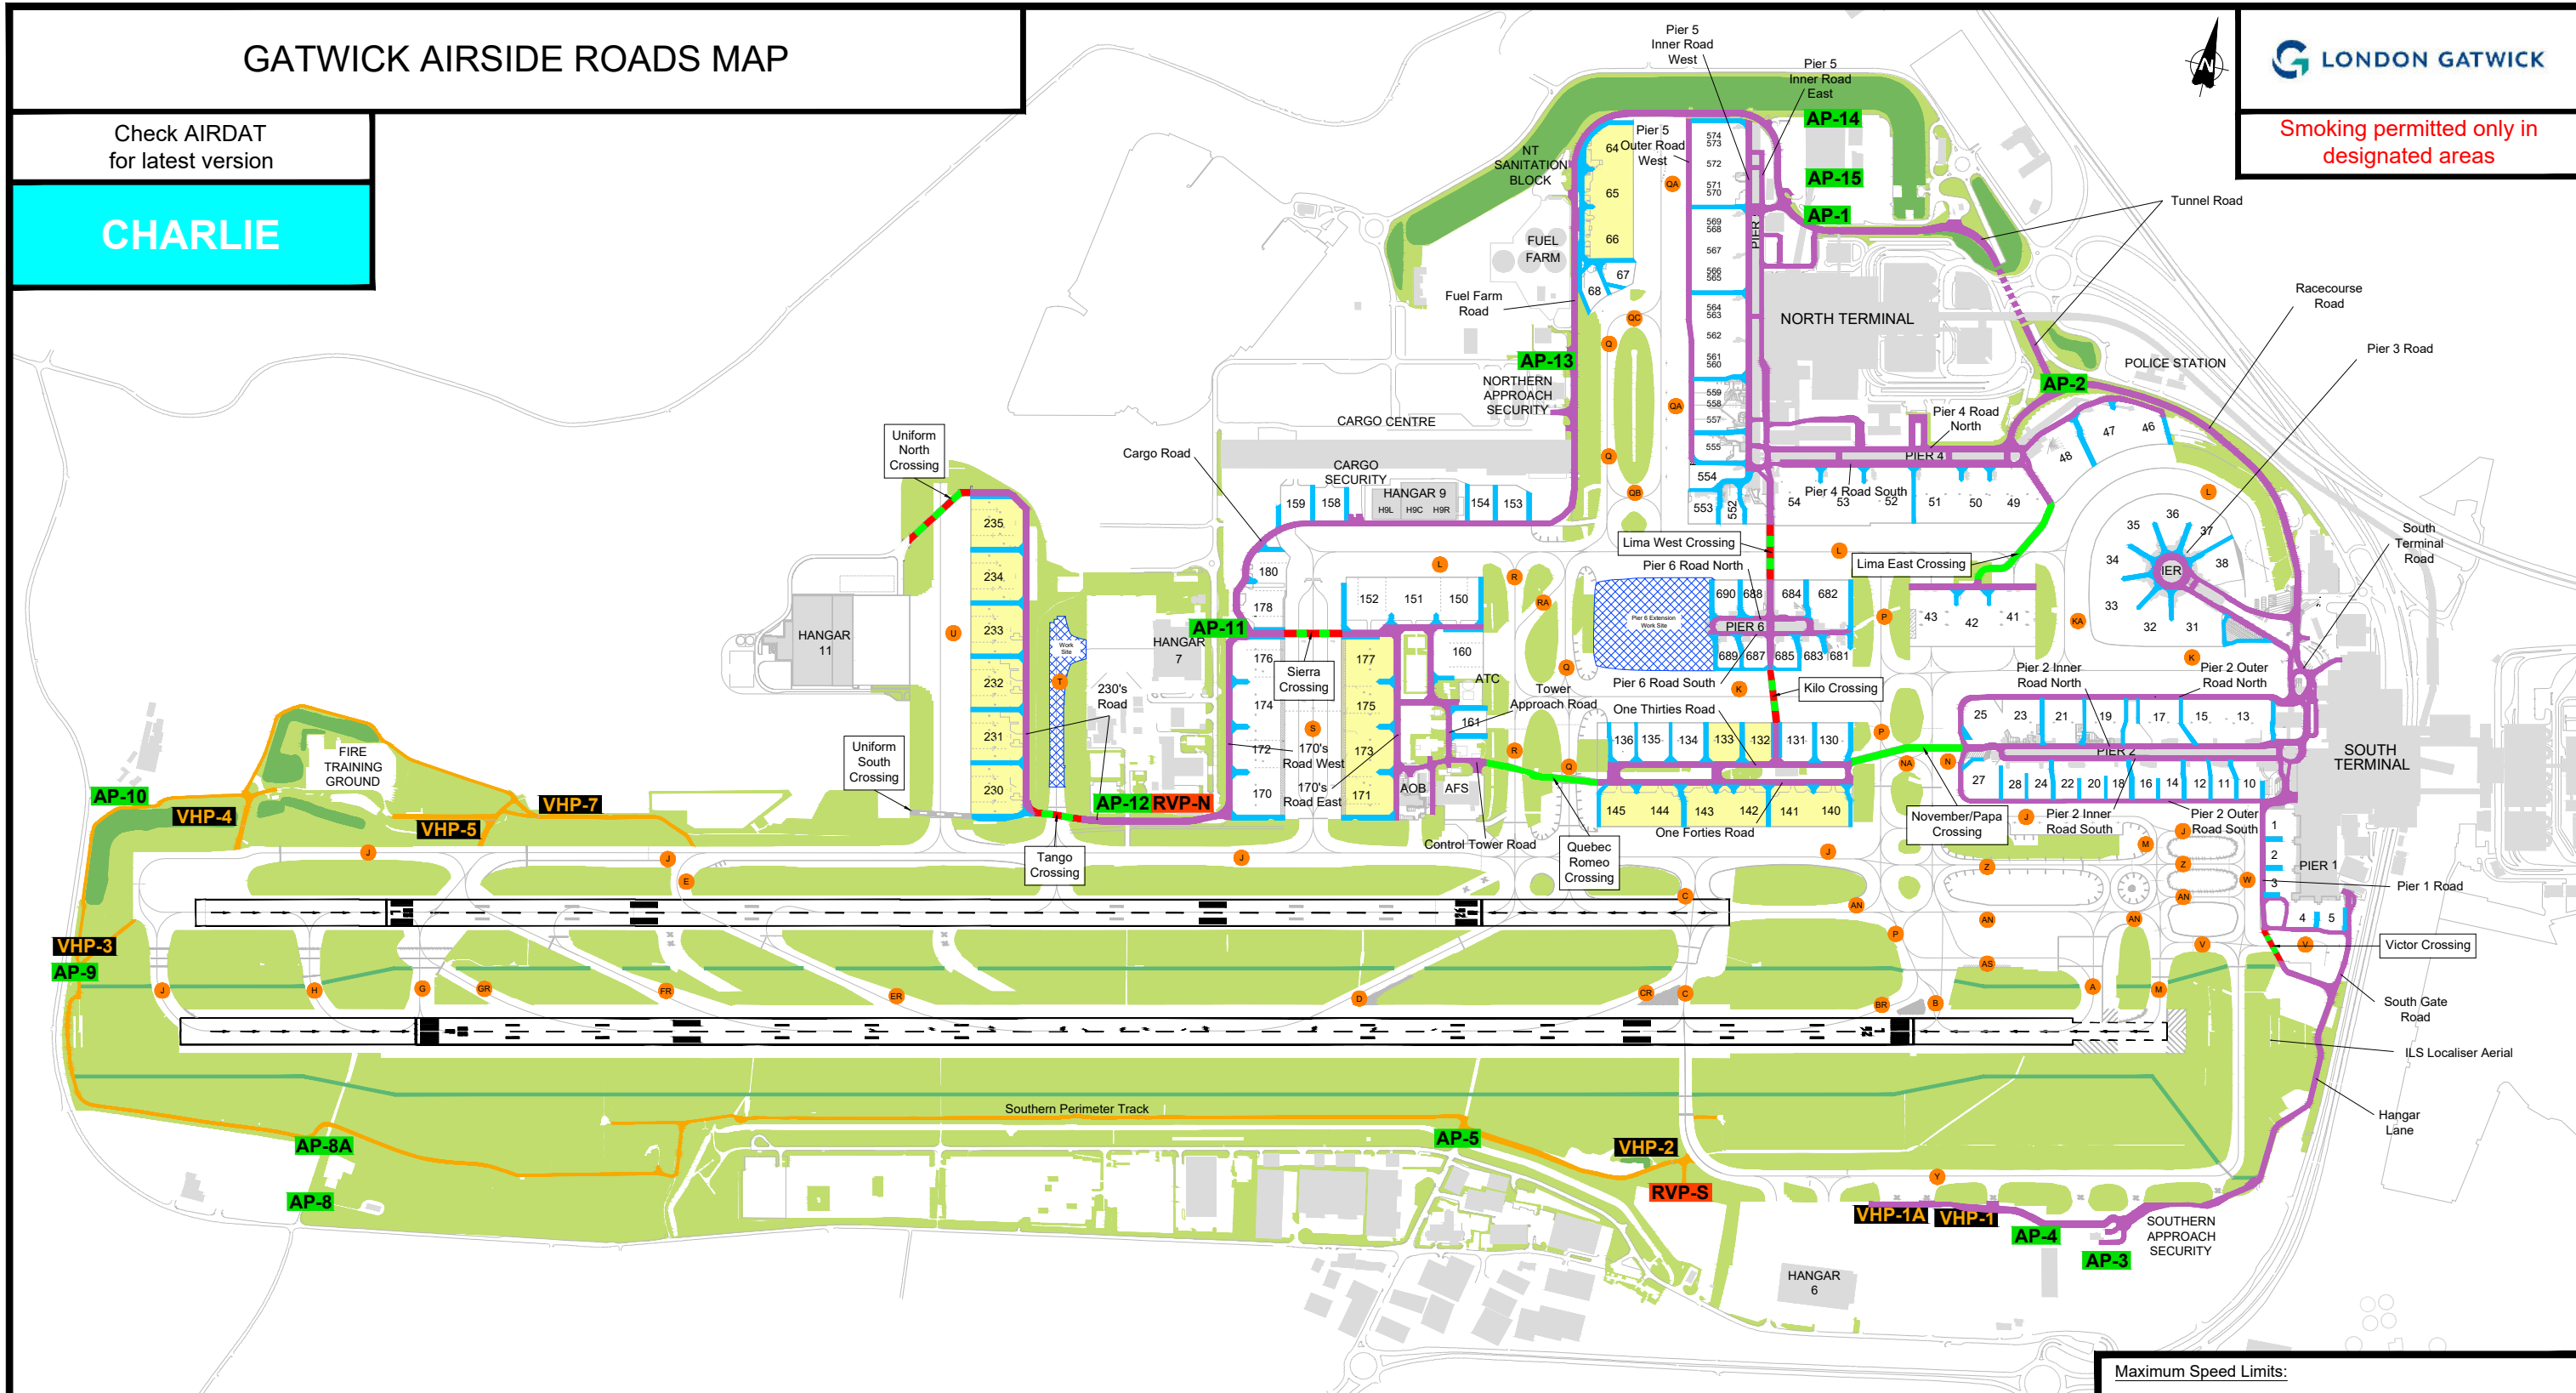

Refer to Ground Movement Control (GMC) Map for GMC Areas and Frequency Change Boundary

Contact Telephone Numbers:

Emergency 222 (from Stand telephone)
Emergency 01293 501222 (from a mobile)

ALL airside incidents must be reported via one of the above numbers

Airfield Operations 3090 (from Stand telephone)
Airfield Operations 01293 503090 (from a mobile)
ATC 01293 601031
Engineering Faults 1111 (from Stand telephone)
Engineering Faults 01293 501111 (from a mobile)

Key:

Aircraft Push & Hold Areas: Local traffic restrictions may be in place. Drivers should exercise extra vigilance when driving in these locations

Airside (Service) Road

Interstand Clearway

Taxiway Crossing - Controlled

Taxiway Crossing - Semi-Controlled

Taxiway Crossing - Uncontrolled (Uniform South - Contractor Access Only)

Taxiway Designation

Rendezvous Point (RVP)

AP5 Access Point (AP)

VHP-1 Vehicle Holding Point (VHP)

Airfield Perimeter Track (Max. Speed 20mph) (Manoeuvring Area Licence Holders Only)

Maximum Speed Limits:

Airside Roads/Crossings 20 mph (or as locally signed)
Interstand Clearways 5 mph
Manoeuvring Area 40 mph

ATC Radio Frequencies

	GMC - North	121.540MHz
	GMC - South	121.805MHz
	Standby (As directed by ATC)	134.230MHz
	Tower	124.230MHz

All vehicles must maintain a Listening Watch with ATC whilst driving on the manoeuvring area

It is the responsibility of all 'M & R' permit drivers to ensure that they are fully conversant with the split GMC frequencies and boundaries as appropriate before entering the manoeuvring area